


Aussie Shade & Hot Houses

Installing the Door Cloths to Plant Stands


1. Hold the door cloth up to the top of the frame and mark each top corner eyelet. Eyelet should be marked in the centre of the fittings. Where multiple doors are used, the centre corner eyelets overlap.

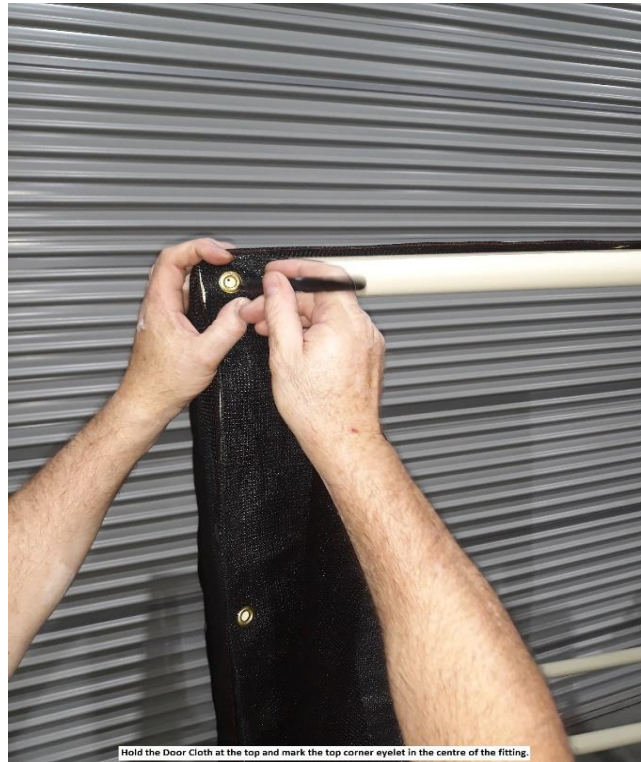

2. Drill each eyelet with a 7mm (9/32) drill.

3. Fix the corners with the Christmas Tree Buttons and then mark and drill the remaining eyelets along the top of the door cloth.

4. Fit the Christmas Tree Buttons to these eyelets.

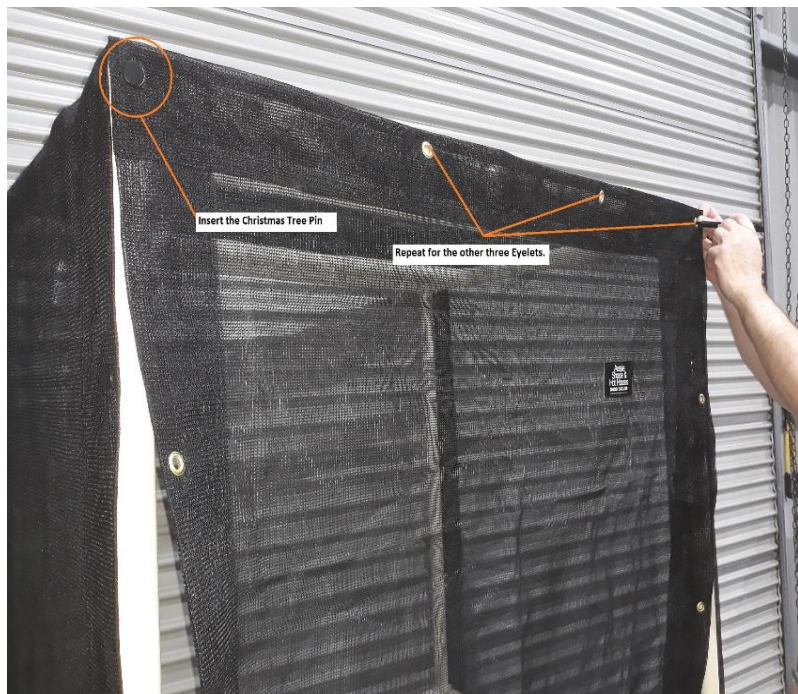



5. Pull the cloth down to ground level and mark each eyelet that aligns with a fitting. Eyelets that align with a fitting should be marked in the centre of the fitting.

6. Centre the Stayput Fastener over the mark and then mark the two mounting holes. Ensure the Stayput Fastener is vertical.



7. Drill both mounting holes to sufficient depth for both screws.

8. Ensure the metal toggle tab is flops to the down position and fix the Stayput Fastener in place with both screws. Do not overtighten screws.



9. Fit the eyelet to the Stayput Fastener and continue to mark and fit all other Stayput Fasteners.

NOTE - Double Stayput Fasteners are used on the centre pipes where two door cloths overlap.



10. When fitting Stayput Fasteners to pipes, fit a curved adapter to the back of the Stayput Fastener before attaching to the the pipe. NO curved adapter is used when attaching to a fitting.

