


Aussie Shade & Hot Houses

Installing the Door

1. Assemble the door frame and lay out the door cloth on top. Once even on all sides drill 9/32 (7 mm) holes for eyelets and secure with the black pins. If you have both shade cloth and solar plastic door cloths, use the solar plastic cloth to mark the holes.



2. Door Pins (hinges) - Mark at the top & bottom inside on right side of the doorway frame at a distance of 32mm from the doorway frame fitting.

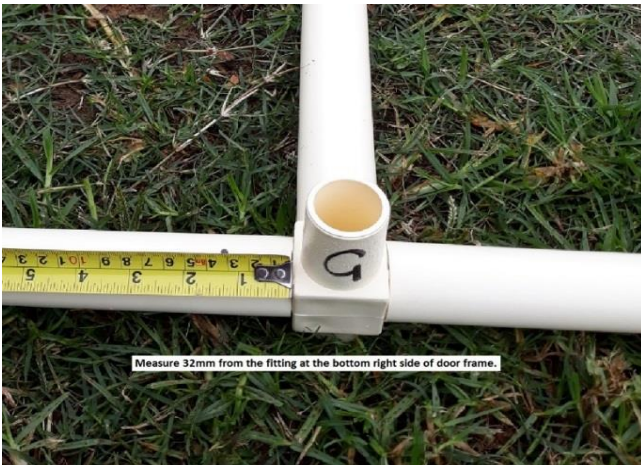

3. Drill a 5/16 (8.0mm) hole completely through the pipe and fitting.



4. Measure and mark the top and bottom of the door frame 16 mm along the corner fitting from the end of the pipe.



5. Drill a 3/8" (8mm) hole to sufficient depth to allow top and bottom pin to be fully inseted.



6. Fit the bottom door pin from under the frame and the two spacers on top.



7. Put the door in place then put the top door pin through the frame and into the door frame. Door opens inwards.



8. Mark and drill the padbolt latch over the top of the shade cloth cover and fit the two screws provided.



9. Mark and drill a hole in the door handle to take the padbolt latch

